



TrailAudio
DIGITAL OUTDOOR AUDIO



OUTDOOR
ENTERTAINMENT



TABLE OF CONTENTS



OUTDOOR
ENTERTAINMENT

GENERAL INFORMATION

Introduction	1
Safety Information	2
Warnings and Cautions	3
Product Contents	4
Product Specifications	5
System Requirements	6

BASIC OPERATION

Connecting to Your Computer	7
Use as an External Hard Drive	8
3rd Party Music Software	8
Firmware Upgrades	8
Trail Audio Display, Parts and Controls	9, 10
Using the Menu System	11
Modes of Operation	12

MUSIC MODE – BASIC FUNCTION

Playing Music Files	13
Selecting Tracks	13
Fast Forward and Reverse	13
A-B Looping	13
Line-In Recording	14

MUSIC MODE – MENU OPTIONS

Playback (Playmode)	15
Equalizer	16
Recording Bit Rate	17
Delete File	18
System Settings	19

TABLE OF CONTENTS

OUTDOOR
ENTERTAINMENT

SYSTEM SETTINGS – MENU OPTIONS

Sleep Timer	20
Idle Time	21
Resume	22
Backlight Time	23
Contrast	24
Scroll Speed	25
Default	26
Firmware Version	27
Automatic Silence Detection (ASD)	28

FM RADIO MODE – BASIC FUNCTION

FM Radio Mode	29
Manual and Preset Modes	30
Setting Channel Presets	31
Deleting Channel Presets	32
Stereo/Mono Operation	33
Recording From FM Radio	34
Formatting your Trail Audio Player	34

TROUBLESHOOTING	35
------------------------	-----------

english
français
español
japan
china



1 GENERAL INFORMATION

INTRODUCTION

Congratulations on your purchase of your Trail Audio device. Designed to meet the needs of outdoor enthusiasts, Trail Audio units are among the worlds first MP3 players water and shock resistant enough to be safely used in the types of environments commonly found while participating in outdoor recreational activities. The design of Trail Audio units make it easy and convenient to use in an outdoor environment. Large buttons make operating the unit quick and easy and the carabiner clip system allows you to easily attach the player to your belt, jacket, backpack or hydration device. Trail Audio products also feature a fully integrated USB connection which eliminates the need for a USB cable and allows the unit to be directly attached to your computers USB ports. Besides being used as an MP3 player, your player may also be used as an external hard drive storage device for your computer.

Please read the following manual carefully to familiarize yourself with the functions of the unit. Here are some of the key features of your Trail Audio unit:

- ↳ **256MB or 512MB internal memory (depending on product version)**
- ↳ **MP3, WMA, ADPCM playback**
- ↳ **FM with 12 preset channel**
- ↳ **Supports ID3Tag**
- ↳ **Firmware upgrades available**
- ↳ **No PC software required for file transfer**
- ↳ **Acts as an external drive, supports file storage and transfer**
- ↳ **Real time Clock display**
- ↳ **Negative LCD display**
- ↳ **Direct USB connection with computer**
- ↳ **A-B looping**
- ↳ **5 Graphic equalizers**
- ↳ **Sleep preset**

TRAILAUDIO DIGITAL OUTDOOR AUDIO

GENERAL INFORMATION

OUTDOOR
ENTERTAINMENT

2

SAFETY INFORMATION

Modifications not authorized by the manufacturer may void user's authority to operate this device.

This equipment has been tested and found to comply with limits for class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy. If not installed and used in accordance with the instruction, may cause harmful interference to radio communications. However, there are no guarantees that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- **Reorient or relocate the receiving antenna.**
- **Increase the separation between the equipment and receiver.**
- **Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.**
- **Consult the dealer or an experienced radio / TV technician for help. Keep in mind, that modifications not authorized by the manufacturer may void users authority to operate this device.**

Strong electro static charges may render the Trail Audio unit inoperable and it will not respond to key presses. If this occurs, simply open the unit, remove and reinstall the battery.

COPYRIGHT NOTICE

Distribution of MP3 files without permission from the content owner is against the copyright laws. HIGHGEAR, Inc. will not be liable for such actions.

english
français
español
japan
china

TRAILAUDIO DIGITAL OUTDOOR AUDIO

3 GENERAL INFORMATION

OUTDOOR
ENTERTAINMENT

WARNINGS AND CAUTIONS

WARNING: Do not use your Trail Audio player under conditions which require you to be aware of your surroundings such as bicycling, skiing, running in populated areas. Wearing your Trail Audio player may impair your ability to hear and quickly respond to certain situations.

CAUTION: Do not expose your Trail Audio Player to unnecessary shock or extreme vibration.

CAUTION: Do not expose your Trail Audio Player to chemicals, direct sunlight or extreme heat.

CAUTION: Keep your Trail Audio Player away from strong magnetic fields as this may cause you to lose information stored in the unit's memory.

CAUTION: While your Trail Audio player is designed to be water resistant when not being used, we strongly recommend you avoid allowing the unit to become wet or submerged. When in use, the unit remains mostly water resistant. However, it is possible for water to enter the unit at the headphone jack when the headphones are installed. Failure to properly install any of the seals of the unit will result in a reduction or elimination of water resistance.

Care should also be taken not to press any keys while the unit is submerged or wet as this may cause water to be forced past the key seals damaging the unit..

TRAILAUDIO DIGITAL OUTDOOR AUDIO

GENERAL INFORMATION



 
OUTDOOR
ENTERTAINMENT

4


PRODUCT CONTENTS




Main Unit

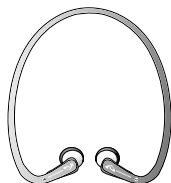

Stereo Earphones

 

USB Extension
Cable

 

Line-In Cable



User Manual

english français español japon china

TRAILAUDIO DIGITAL OUTDOOR AUDIO



5 GENERAL INFORMATION

PRODUCT SPECIFICATIONS

Dimensions (L x W x H)	141 x 34 x 22mm
Net Weight	49 grams
Internal Flash Memory	256MB/512MB (Dependent on Model)
Power Supply	1.5v AAA
PC Interface	Direct USB
Radio Function	FM with auto scan and 12 preset channels
Digital Music Format Playback	MP3, WMA, all bit rates including VBR
Signal to Noise Ratio	> 90dB
Frequency Range	20Hz-20KHz
Battery Life	Approximately 10 hours
Equalizer	Normal, Jazz, Rock, Classic, Pop, User Default
Play Mode	Normal, Repeat one, Repeat all, Shuffle, Repeat Shuffle

english
français
español
japan
china

GENERAL INFORMATION

OUTDOOR
ENTERTAINMENT

6

SYSTEM REQUIREMENTS

Your PC must have the following minimum specifications:

- **Windows 98SE, ME, 2000, XP**
- **Pentium II 200**
- **64MB RAM**
- **500MB Hard disk space**
- **CD-ROM drive**
- **USB 1.1**

Trail Audio players should work with Apple Macintosh products running OS X and higher. However, Trail Audio players may not be supported by future generations of Apple Macintosh operating systems.

The MP3 player is installed as a mass storage device. The driver installation is not necessary unless your PC is running Windows 98/SE.

Windows 98, ME, 2000 and XP are registered trademarks of the Microsoft Corporation. Pentium is a registered trademark of the Intel Corporation. Apple and Macintosh are registered trademarks of the Apple Corporation.



7 BASIC OPERATION

Trail Audio players are mass storage devices and function like a small external hard drive to your computer. Simply plug the unit into any functional USB port and your computer will, in most cases, automatically recognize it. Once recognized, you can simply drag and drop file from your computer to your Trail Audio player in the same manner as you would move any other file.

With most operating systems, no driver or software installation is required. A special driver is required for users running Windows 98SE, please download the driver to your desktop from the High Gear website (www.highgear.com) After downloading the file to your desktop; double click the driver file (setup.exe). Follow onscreen prompts to complete the driver installation process.

CONNECTING YOUR TRAIL AUDIO PLAYER TO YOUR COMPUTER:

1. Switch on the player and connect it directly to your computer using the USB jack located underneath the carabiner cover. If it is not possible to connect the unit directly to a USB port, please use the USB extension cable supplied in the package.
2. Double click on "My Computer" on the desktop of windows, there will be an additional drive created and given a drive letter.
3. If properly connected to your PC, you will see "USB Connected" displayed on the player's screen.
4. To transfer music files to your MP3 player, simply drag the files from the Windows File Explorer and drop them to the drive corresponding to your Trail Audio player. You can also upload files from the player to the PC by doing the reverse.

TRAILAUDIO DIGITAL OUTDOOR AUDIO

BASIC OPERATION



USING YOUR TRAIL AUDIO PLAYER AS AN EXTERNAL HARD DRIVE

Your Trail Audio player can also be used as a "memory stick" for the storage of any type of non-music file as long as it does not exceed the available memory of the unit. This makes the unit extremely useful for quickly transferring small to medium sized files between computers.

USING THIRD PARTY MUSIC MANAGEMENT SOFTWARE

Your Trail Audio player is compatible with Music Match and other music management software. You can directly rip your audio CDs to WMA or MP3 format using most music management software and directly drag and drop from the software to the player.

FIRMWARE UPGRADES

Check www.highgear.com for new firmware upgrades. New firmware developments may provide additional functions as well as improvements of the Trail Audio operating system. Upgrades will be posted as they become available.

 
CAUTION: Only unplug the USB cable when all download procedures are completed.

Do not unplug the USB cable when the LCD is still displaying "USB writing" as doing so may corrupt the files stored in the player and you will need to re-format the MP3 player. If the player encounters abnormal interruption during recording such as battery removal, you may also need to reformat it.


9 BASIC OPERATION

DISPLAY, PARTS AND CONTROLS OF YOUR TRAIL AUDIO PLAYER



MUSIC DISPLAY

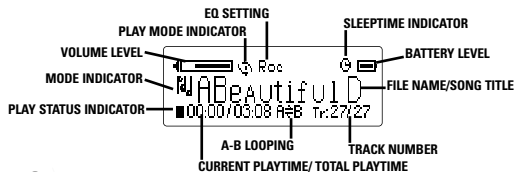

FM RADIO DISPLAY

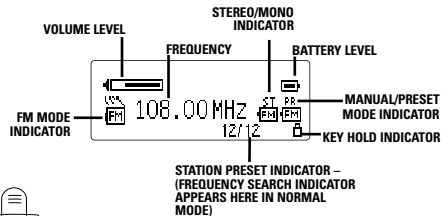 

english français español japon china

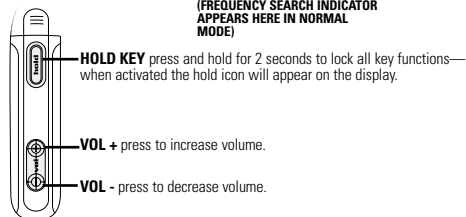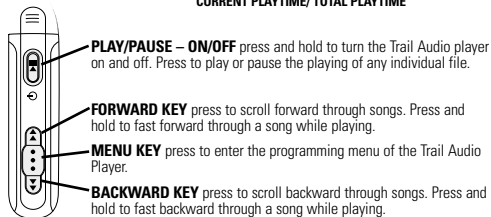  

TRAILAUDIO DIGITAL OUTDOOR AUDIO

BASIC OPERATION



 
 
OUTDOOR
ENTERTAINMENT

10




HEADPHONE JACK
allows you to connect the Trail Audio Player to headphones or other output source.


RECORD/A-B press to start and stop recording from the FM radio or line-in source. Or capture an a-b segment during playback.



 USB PORT allows direct connection of the Trail Audio Player to a computer for transferring files.



 LINE-IN PORT
allows you to connect the Trail Audio Player to an external music source.



CARABINER CLIP allows you to secure the Trail Audio Player to clothing, backpack, etc.

BATTERY COVER secures power source of the Trail Audio Player.

The battery cover of the Trail Audio Player is specially designed to form a water tight seal when properly closed. To assure a proper seal, press the door fully into position until it is fully flush with the main body of the player. Failure to fully seal the battery door may result in moisture entering the unit.

The Trail Audio Player uses one 1.5v AAA battery as its power source. When replacing the battery pay attention to the polarity of the battery. The positive (+) terminal of the battery should be facing AWAY from the carabiner clip of the unit.

english
français
español
japan
china

TRAILAUDIO DIGITAL OUTDOOR AUDIO



11 BASIC OPERATION

TRAIL AUDIO MENU SYSTEM


Your Trail Audio player uses an icon based menu driven user interface. Each function of the unit is identified by an icon along the lower edge of the display and a written description along the top edge.

NAVIGATE THE MENU SYSTEM

1. Enter the setup menu for the unit by pressing and releasing the **MENU** key
2. Navigate through the menu options using the **◀** and **▶** keys.
3. Select menu options by pressing and releasing the **▶||** key

The accompanying pictures show the icons that will appear on the display when you press the **MENU** key along with their names as they will be displayed along the bottom of the display.

 Within each of the primary Menu items (**MODE, PLAYMODE, EQ, RBR, DELETE AND SETTING**) there are sub-menu items corresponding to each of these functions.



MODE



PLAYMODE



EQ



RBR



DELETE



SETTING


TRAILAUDIO DIGITAL OUTDOOR AUDIO


MODES OF OPERATION



OUTDOOR
ENTERTAINMENT

12

The first menu option is **MODE**.  Your Trail Audio player has two operational MODES.

MUSIC:  Prepares the unit to playback MP3 files

FM:  Activates the FM radio system for use



english
français
español
japan
china

TRAILAUDIO DIGITAL OUTDOOR AUDIO



13 MUSIC MODE - BASIC OPERATION

PLAYING MUSIC FILES

With the player in **MUSIC MODE**. Press **▶||** to start playback. While playing, press **▶||** to pause. When Stopped, Playing and Paused, the adjacent icons will be shown on the display to the left of the song playtime.



STOPPED



PLAYING



PAUSED

SELECTING TRACKS

When the player is playing, stopped or paused, press and release the **▶▶** or the **◀◀** control to advance through the tracks.

FAST FORWARD/FAST REVERSE

When the player is playing, press and hold the **▶▶** or the **◀◀** control for more than one second to start fast forwarding or reversing. When using the fast forward or fast reverse commands, the adjacent icons will be shown on the display to the left of the song playtime.

A-B LOOPING

Allows you to capture and replay a specific segment of a music file. While playing a music file, press **REC/A-B** to mark the point where you want the loop to start (A). Press **REC/A-B** again where you want the section to end (B). The marked section will start to repeat. Press **REC/A-B** one more time to cancel the loop. A-B looping will be shown by the adjacent icon appearing on the display.

NOTE Advancing more than 3 tracks in rapid succession may cause the player to skip. If this occurs, remove and reinsert the battery to reset the flash memory.

FAST
FORWARDFAST
REVERSE

A-B LOOPING

MUSIC MODE - BASIC OPERATION

OUTDOOR
ENTERTAINMENT

 
 
14

RECORDING FROM LINE-IN PORT

The Trail Audio player is capable of recording from an external source like another MP3 player via the Line-In port located at the bottom of the unit. Simply connect the Line-Out port (Headphone Jack) of the external source to the Line-In port of the Trail Audio Player using the supplied patch cable.

With the external source connected, simply press the **REC/A-B** button to start and stop the recording process.

Files recorded using the Line-In port are numbered sequentially in the order recorded. Files can then be uploaded to your computer and the file name changed if desired.

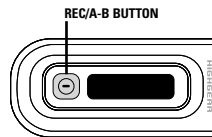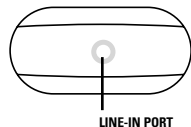english
français
español
japan
china

15 MUSIC MODE - MENU OPTIONS



OUTDOOR
ENTERTAINMENT

When in **MUSIC MODE**, there are a range of programming options available to the user. Press the **MENU** key to enter the setup menu. Use the **▶▶** or **◀◀** keys to advance to the setup option you wish to program.

MUSIC PLAYBACK (PLAY MODE) MENU

Your Trail Audio Player allows you to program several different ways to playback the music files you have stored.

NORMAL: Play all tracks in order.



REPEAT ONE: Play the current track repeatedly.

REPEAT ALL: Play all tracks in order continuously.

SHUFFLE: Play all tracks in random once.

RPT SHUFFLE: Play all tracks in random continuously.

1. Press the **MENU** key to enter setup menu.
2. Use the **▶▶** or **◀◀** keys to advance to the **PLAY MODE** menu.
3. Select **PLAY MODE** by pressing the **▶||** key.
4. Use the **▶▶** or **◀◀** keys to advance through the playback options.
5. Select the play back mode you want by pressing the **▶||** key

  

MUSIC MODE - MENU OPTIONS



OUTDOOR
ENTERTAINMENT

16

EQUALIZER MENU

Your Trail Audio player is equipped with several preset equalizers to allow you to customize the sound for the type of music you most commonly listen to. There is also a custom **USER DEFAULT** option which allows you to set your own **TREBLE** and **BASS** levels.

The adjacent drawings show the icons for the equalizers as they will appear on the screen.

The preset equalizers are: **NORMAL** **ROCK** **JAZZ**
CLASSIC(AL) **POP** **USER**

There are two setting options under **USER DEFAULT** – **BASS** and **TREBLE** as shown in the drawings, each with 4 levels.

Bass 1/2
TREBLE 3/4
BASS 1/2



NORMAL



ROCK



JAZZ



CLASSIC



POP



USER
DEFAULT

1. Press the **MENU** key to enter setup menu.
2. Use the **▶▶** or **◀◀** keys to advance to the **EQUALIZER MODE** menu.
3. Select **EQUALIZER MODE** by pressing the **▶||** key.
4. Use the **▶▶** or **◀◀** keys to scroll through the various equalizer settings.
5. Select a setting by pressing the **▶||** key.

english
français
español
japan
china

TRAILAUDIO DIGITAL OUTDOOR AUDIO

17 MUSIC MODE - MENU OPTIONS



OUTDOOR
ENTERTAINMENT

RECORDING BIT RATE (RBR)

This command allows you to set the amount of file compression when recording through the Line-In port or from the FM radio. There are three Recording Bit Rate compressions of 48kbps, 96kbps and 128kbps.

NOTE The higher the number the better the quality of the sound. However, recording at higher bit rates also results in larger files

1. Press the **MENU** key to enter setup menu.
2. Use the **▶▶** or **◀◀** keys to advance to the **RBR MODE** menu.
3. Select **RBR MODE** by pressing the **▶||** key.
4. Use the **▶▶** or **◀◀** keys to advance through the recording rate options.
5. Select the recording rate you want by pressing the **▶||** key



48kbps



96kbps



128kbps

MUSIC MODE - MENU OPTIONS




OUTDOOR
ENTERTAINMENT

18

DELETE SONG FILE MENU

This command allows you to manage your music files directly from the player itself.

1. Press the **MENU** key to enter setup menu.
2. Use the **▶▶** or **◀◀** keys to advance to the **DELETE MODE** menu.
3. Select **DELETE MODE** by pressing the **▶||** key.
4. The display will ask you if you wish to "**DELETE FILE?**" with the name of the file listed below.
5. Use the **▶▶** or **◀◀** keys to scroll through all the files stored in the player.
6. Delete a file by pressing the **▶||** key when the file appears on the display.
7. To escape without deleting a file, press the **MENU** key.

 

english
français
español
japan
china

19 MUSIC MODE - MENU OPTIONS




OUTDOOR
ENTERTAINMENT

SYSTEM SETTINGS MENU

SYSTEM SETTINGS allow you to program the general operational settings for the Trail Audio unit. Under the **SETTING** menu, you will find a range of different programming options shown below.

NOTE: The **SETTING** menu is accessible from both the **MUSIC** and **RADIO MODES**

1. Press the **MENU** key.
2. Use the **▶▶** or **◀◀** keys to scroll to the **SETTING MODE**.
3. Select **SETTING MODE** by pressing the **▶||** key.
4. Use the **▶▶** or **◀◀** keys to scroll through the various setting options shown.
5. Select the desired Mode by pressing the **▶||** key.

 

The screen above is shown in its entirety. On your player it will appear as a scrolling line.

MUSIC AND FM RADIO MODES - SYSTEM SETTINGS



OUTDOOR
ENTERTAINMENT

20

SLEEP TIMER

This feature allows the user to preset an automatic sleep timer. When programmed, the Trail Audio player will be automatically switched off after the preset period.

The sleep timer options are: **OFF, 15, 30, 45 AND 60 MINUTES.**

1. Press the **MENU** Key.
2. Use the **▶▶** or **◀◀** keys to advance to **SETTING**.
3. Select **SETTING** by pressing the **▶||** key.
4. Use the **▶▶** or **◀◀** keys to scroll to **SLEEP** timer.
5. Select **SLEEP** by pressing the **▶||** key.
6. Use the **▶▶** or **◀◀** keys to scroll through the setting options.
7. Select the desired option by pressing the **▶||** key.



21 MUSIC AND FM RADIO MODES - SYSTEM SETTINGS



OUTDOOR
ENTERTAINMENT

IDLE TIME

This feature sets the **IDLE TIME** of the Trail Audio player. The device will automatically shutdown when it has been idled for a preset period so as to save battery. The idle timer options are: **OFF, 3, 5, 10 AND 30 MINUTES.**



1. Press the **MENU** Key
2. Use the **▶▶** or **◀◀** keys to advance to **SETTING**
3. Select **SETTING** by pressing the **▶||** key
4. Use the **▶▶** or **◀◀** keys to scroll to **IDLE TIME.**
5. Select **IDLE** by pressing the **▶||** key
6. Use the **▶▶** or **◀◀** keys to scroll through the setting options.
7. Select the desired option by pressing the **▶||** key

MUSIC AND FM RADIO MODES - SYSTEM SETTINGS

OUTDOOR
ENTERTAINMENT

22

RESUME

When this feature is "**ON**", the Trail Audio player will navigate to the beginning of the track that was last playing when the device was powered off. When "**OFF**", the player will start playing at the first file.



1. Press the **MENU** Key.
2. Use the **▶▶** or **◀◀** keys to advance to **SETTING**.
3. Select **SETTING** by pressing the **▶||** key.
4. Use the **▶▶** or **◀◀** keys to scroll to **RESUME**.
5. Select **RESUME** by pressing the **▶||** key.
6. Use the **▶▶** or **◀◀** keys to scroll through the setting options.
7. Select the desired option by pressing the **▶||** key.

23 MUSIC AND FM RADIO MODES - SYSTEM SETTINGS



OUTDOOR
ENTERTAINMENT

BACKLIGHT TIME

This feature programs the display backlight of the Trail Audio player to remain active for a certain period of time. The options are:

DISABLE-no backlight, **10, 30** and **60 SECONDS**, and **PERMANENT**.



1. Press the **MENU** Key.
2. Use the **▶▶** or **◀◀** keys to advance to **SETTING**.
3. Select **SETTING** by pressing the **▶||** key.
4. Use the **▶▶** or **◀◀** keys to scroll to **BACKLIGHT TIME**.
5. Select **BACKLIGHT TIME** by pressing the **▶||** key.
6. Use the **▶▶** or **◀◀** keys to scroll through the setting options.
7. Select the desired option by pressing the **▶||** key.

NOTE Excessive use of the **BACKLIGHT** will reduce battery life.

MUSIC AND FM RADIO MODES - SYSTEM SETTINGS



OUTDOOR
ENTERTAINMENT

24

CONTRAST

This feature sets the **LCD CONTRAST** level ranging from **1** to **10**.

1. Press the **MENU** Key.
2. Use the **▶▶** or **◀◀** keys to advance to **SETTING**.
3. Select **SETTING** by pressing the **▶||** key.
4. Use the **▶▶** or **◀◀** keys to scroll to **CONTRAST**.
5. Select **CONTRAST** by pressing the **▶||** key.
6. Use the **▶▶** or **◀◀** keys to scroll through the setting options.
7. Select the desired option by pressing the **▶||** key.



english
français
español
japan
china

25 MUSIC AND FM RADIO MODES - SYSTEM SETTINGS



OUTDOOR
ENTERTAINMENT

SCROLLING SPEED

This feature controls the **SCROLLING SPEED** of song's name on the display. You can choose between 5 levels: **OFF**, **1 (VERY SLOW)**, **2 (SLOW)**, **3 (MEDIUM)** and **4 (FAST)**.



1. Press the **MENU** Key.
2. Use the **▶▶** or **◀◀** keys to advance to **SETTING**.
3. Select **SETTING** by pressing the **▶||** key.
4. Use the **▶▶** or **◀◀** keys to scroll to **SCROLLING SPEED**.
5. Select **SCROLLING SPEED** by pressing the **▶||** key.
6. Use the **▶▶** or **◀◀** keys to scroll through the setting options.
7. Select the desired option by pressing the **▶||** key.

MUSIC AND FM RADIO MODES - SYSTEM SETTINGS

OUTDOOR
ENTERTAINMENT

26

DEFAULT

This feature allows you to return all of the **PROGRAMMING OPTIONS** of the Trail Audio Player to their original values.



1. Press the **MENU** Key.
2. Use the **▶▶** or **◀◀** keys to advance to **SETTING**.
3. Select **SETTING** by pressing the **▶||** key.
4. Use the **▶▶** or **◀◀** keys to scroll to **DEFAULT**.
5. Select **DEFAULT** by pressing the **▶||** key.
6. Use the **▶▶** or **◀◀** keys to scroll through the setting options.
7. Select the desired option by pressing the **▶||** key.

english
français
español
japan
china

27 MUSIC AND FM RADIO MODES - SYSTEM SETTINGS

OUTDOOR
ENTERTAINMENT

FIRMWARE VERSION

This screen allows you to view the version of software the unit is currently using.



1. Press the **MENU** Key.
2. Use the **▶▶** or **◀◀** keys to advance to **SETTING**.
3. Select **SETTING** by pressing the **▶||** key.
4. Use the **▶▶** or **◀◀** keys to scroll to **VERSION**.
5. Select **VERSION** by pressing the **▶||** key.

MUSIC AND FM RADIO MODES - SYSTEM SETTINGS



OUTDOOR
ENTERTAINMENT

28

AUTOMATIC SILENCE DETECTION (ASD)

This feature allows you to choose the amount of silence at the end of a recording using the Line-In feature allowing you to set the time gap between recorded files. The options are: **OFF, 1sec, 2sec or 3sec.**



1. Press the **MENU** Key.
2. Use the **▶▶** or **◀◀** keys to advance to **SETTING**.
3. Select **SETTING** by pressing the **▶||** key.
4. Use the **▶▶** or **◀◀** keys to scroll to **ASD**.
5. Select **ASD** by pressing the **▶||** key.
6. Use the **▶▶** or **◀◀** keys to scroll through the setting options.
7. Select the desired option by pressing the **▶||** key.

english
français
español
japan
china

29 FM RADIO MODE - BASIC OPERATION

OUTDOOR
ENTERTAINMENT

TO ENTER THE FM RADIO MODE:

1. Press the **MENU** key.
2. Select **MODE** by pressing the **▶||** key.
3. Use the **▶▶** or **◀◀** keys to scroll to **FM MODE**.
4. Select **FM MODE** by pressing the **▶||** key.



FM RADIO MODE - BASIC OPERATION



OUTDOOR
ENTERTAINMENT

30

MANUAL MODE/PRESET MODE

There are two **FM RADIO** modes, **MANUAL** and **PRESET**

SELECT MANUAL or PRESET MODE


1. Enter the **FM RADIO MODE** as described previously.
2. Press the **MENU** key.
3. Use the **▶▶** or **◀◀** keys to scroll either **MANUAL** or **PRESET** Mode.
4. Select **MODE** by pressing the **▶||** key.

In **MANUAL MODE** the radio is tuned using the **▶▶** or **◀◀** keys to scroll through the radio frequency range from 87.5 to 108.0MHz.

The **PRESET MODE** allows you to program 12 of your favorite stations into the unit and use the **▶▶** or **◀◀** keys to scroll through them.

NOTE only the alternate mode option will appear on the display. For example, if you are already in the **PRESET MODE** and you enter the **MENU**, you will only see the option to change the FM Radio setting to **MANUAL MODE**.

 
CHANGE TO MANUAL MODE



FM MANUAL MODE



 CHANGE TO PRESET MODE



FM PRESET MODE



english français español japon china

31 FM RADIO MODE - BASIC OPERATION



OUTDOOR
ENTERTAINMENT

SETTING CHANNEL PRESETS

Your Trail Audio player can store up to 12 preset stations. When the radio is in the **PRESET MODE** you can quickly scroll through the stations using the ► or ◀ keys. This section gives instructions for saving program presets.

1. Enter the **RADIO** mode as described previously.
2. In **MANUAL MODE** tune the radio to the frequency you wish to preset.
3. Press the **MENU** button.
4. Use the ► or ◀ controls to select **CHANEL PRESET**.
5. Press ►||.
6. Use the ► or ◀ controls to select the **PRESET NUMBER**.
7. Press ►|| to **SAVE**.

NOTE When battery is not fully charged, this process may need to be repeated to properly program channel presets.

 
FM MANUAL MODE



SELECT CHANNEL PRESET



SAVE CHANNEL PRESET



FM RADIO MODE - BASIC OPERATION



OUTDOOR
ENTERTAINMENT

 
32

DELETING CHANNEL PRESETS


1. Enter the **RADIO PRESET MODE** as described previously.
2. Press the **MENU** button.
3. Use the **▶▶** or **◀◀** controls to select **DELETE**.
4. Press **▶▶**.
5. Use the **▶▶** or **◀◀** controls to select the preset program you wish to delete.
6. Press **▶▶** to confirm delete channel preset.



DELETE CHANNEL PRESET



CONFIRM DELETE PRESET

 

english
français
español
japan
china

TRAILAUDIO DIGITAL OUTDOOR AUDIO

33 FM RADIO MODE - BASIC OPERATION



OUTDOOR
ENTERTAINMENT


STEREO/MONO OPERATION

Your Trail Audio Player can be programmed to play FM stations in either Monophonic or Stereophonic sound.


1. Enter either the **MANUAL** or **PRESET** radio mode as described previously.
2. Press the **MENU** key
3. Use the **▶▶** or **◀◀** keys to scroll to either **MONO** or **STEREO** Mode
4. Select **MODE** by pressing the **▶||** key

NOTE only the alternate mode option will appear on the display. For example, if you are already in the **MONO** Mode and you enter the **MENU**, you will only see the option to change the setting to **STEREO** Mode.

 CHANGE TO MONO OPERATION



CHANGE TO STEREO OPERATION

 

FM RADIO MODE - BASIC OPERATION



RECORDING

Your Trail Audio player can record in stereo directly to memory from any FM radio broadcast. The unit automatically records from the FM radio at a bit rate of 128kbps.

While listening to any radio station, simply press the Rec/A-B button on the face of the unit.

To stop the recording process simply press the Rec/A-B button a second time.

While recording the display will show the amount of time for the recorded song along with the amount of time remaining in memory.

NOTE:

Radio recording quality depends on the reception quality at the time of recording

HOW TO FORMAT THE PLAYER

The purpose of re-formatting the player is to try to restore the player to normal operation. This is for when the player is not able to function properly or in cases where your player is unable to power on. Keep in mind, all information stored on the player will be deleted by the formatting process.

1. Connect the player to the PC.
2. Right click the additional drive and click Format.
3. Click "Yes" to confirm.

NOTE: *The Trail Audio player supports FAT/FAT16 file formats. DO NOT format the unit using a FAT 32 format.*

35 TROUBLE SHOOTING



OUTDOOR
ENTERTAINMENT

PROBLEM	SOLUTION
The player does not work or the display is blank.	Check to make sure battery is still good.
The keys do not respond.	Be certain the key lock function is not activated. If key lock is active the key lock icon will appear on the unit's display.
Unable to play files.	1) Be sure there are MP3 files stored in memory. 2) Be sure the device is in Music Mode
A-B Looping does not function	This key only works during playback of music.
Unable to install driver or software	Our software driver is compatible with Win 98, 2000, ME, XP, as well as Macintosh OS X. Other systems may not be supported.
Unable to find the mass storage device after connection to the PC.	1) Make sure that the correct driver is installed. 2) Make sure the Trail Audio player is turned on and fully connected to your computers USB port. 3) Check Device Manager in your computer to be sure the player is correctly installed
How to restore the player to default settings.	Choose "Default" in system settings and select "Yes" to restore the player to its original factory settings.
No Backlight	Check if the backlight is switched "OFF" in the system setting.

TrailAudio
DIGITAL OUTDOOR AUDIO



OUTDOOR
ENTERTAINMENT



HIGHGEAR USA INC.

web: www.highgear.com

email: contacts@highgear.com



TrailAudio
DIGITAL OUTDOOR AUDIO



OUTDOOR
ENTERTAINMENT



HIGHGEAR®

HIGHGEAR USA INC.

web: www.highgear.com

email: contacts@highgear.com

© 2004 Highgear USA, Inc. All Rights Reserved.